



SuperMax
Tools

**OWNER'S
MANUAL**



CE

**UK
CA**

**19-38
DRUM SANDER**

© 07/2024 SuperMax Tools

P. 888.454.3401
F. 651.454.3465

SuperMaxTools.com
sales@SuperMaxTools.com



DECLARATION OF CONFORMITY

We
(Manufacturer)

Laguna Tools Inc.
2072 Alton Parkway, Irvine, California 92606, USA

Declare that the product name: Woodworking Drum Sander
Model Name : 71632, 71938, 71938-D, 72550

Fulfils all the relevant provisions of:

- The Supply of Machinery (Safety) Regulations 2008 (as amended)
- The Electromagnetic Compatibility Regulations 2016

Person authorized to compile the technical file:

Name: Axminster Tool Centre Ltd
Address: Unit 10 Weycroft Avenue, Axminster, Devon, EX13 5PH, United Kingdom

Mounting and connecting instructions defined in catalogues and technical construction files must be respected by the user.

They are based on the following standards :


- EN ISO 12100:2010 Safety of Machinery - General principles for design / Risk Assessment and Risk reduction.
- EN 60204-1:2018 Safety of machinery – Electrical equipment of machines, part 1 : General requirements
- EN 13849-1:2015 Safety of machinery – Safety – related parts of control systems Part 1: General principles for design
- EN IEC 61000-6-2:2019 Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments
- EN IEC 61000-6-4:2019 Electromagnetic compatibility (EMC) - Part 6-4: Generic standards - Emission standard for industrial environments
- EN 61000-4-2: 2009 Electrostatic discharge (ESD)
- EN 61000-4-4: 2012 Electrical fast transient/burst requirements (EFT/Burst)
- EN 61000-4-6: 2014 Immunity to conducted disturbances, induced by radio-frequency fields (CS)

The relevant technical documentation has been compiled in accordance with Annex VII, Part B of The Supply of Machinery (Safety) Regulations 2008(as amended). We undertake, in response to a reasoned request, to supply it to the market surveillance authorities within a reasonable period.

Name : Torben Helshoj

Responsibility : President

Authorized Signature

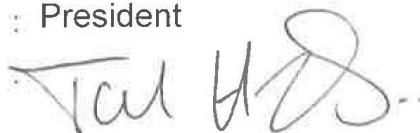

Date : Oct. 15, 2021

Place : Laguna Tools Inc.

2072 Alton Parkway, Irvine, California 92606, USA

Telephone: +1 800 234-1976

Fax: +1 949 474-0150



TABLE OF CONTENTS

| | |
|---|--------------|
| SAFETY RULES | 4 |
| NOISE EMISSION | 5 |
| SPECIFICATIONS..... | 6 |
| ABOUT THE SUPERMAX TOOLS DRUM SANDER | 7 |
| UNPACKING YOUR DRUM SANDER..... | 7 |
| SETTING UP YOUR SUPERMAX TOOLS DRUM SANDER | 11 |
| Checking drum alignment..... | 11 |
| Connecting Dust Collectors..... | 12 |
| Power and Electrical Safety | 12 |
| ABRASIVE SELECTION GUIDE | 12 |
| Wrapping Abrasives | 13 |
| Proper Abrasive Wrap Position | 14 |
| Abrasive Wrap Tension Adjustment..... | 14 |
| Maximizing Abrasive Longevity | 14 |
| OPERATING YOUR DRUM SANDER | 15 |
| Drum Depth of Cut | 15 |
| Conveyor and Speed Rate..... | 16 |
| Stock Feeding Operation..... | 16 |
| Stock Feeding Maximum Performance..... | 16 |
| Tension Roller Pressure..... | 17 |
| Tension Roller Contact Adjustment..... | 17 |
| Conveyor Belt Tension..... | 18 |
| Conveyor Belt Tracking..... | 18 |
| MAINTENANCE..... | 18 |
| Monthly Maintenance..... | 18 |
| Replacing Conveyor Belts | 18 |
| Cleaning the Machine | 19 |
| SUPPLY CHECKLIST | 19 |
| TROUBLESHOOTING YOUR SUPERMAX TOOLS DRUM SANDER..... | 20 |
| WIRING DIAGRAM | 22 |
| PARTS LIST AND DIAGRAMS..... | 23-27 |

SAFETY RULES

1. KEEP GUARDS IN PLACE and in working order.
2. REMOVE ADJUSTING KEYS AND WRENCHES. Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.
3. KEEP WORK AREA CLEAN. Cluttered areas and benches invite accidents.
4. DON'T USE IN DANGEROUS ENVIRONMENT. Don't use power tools in damp or wet locations, or expose them to rain. Keep work area well lighted.
5. KEEP CHILDREN AWAY. All visitors should be kept safe distance from work area.
6. MAKE WORKSHOP CHILD PROOF with padlocks, master switches, or by removing starter keys.
7. DON'T FORCE TOOL. It will do the job better and safer at the rate for which it was designed.
8. USE RIGHT TOOL. Don't force tool or attachment to do a job for which it was not designed.
9. USE PROPER EXTENSION CORD. Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. Table A (on the next page) shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gage. The smaller the gage number, the heavier the cord.
10. WEAR PROPER APPAREL. Do not wear loose clothing, gloves, neckties, rings, bracelets, or other jewelry which may get caught in moving parts. Nonslip footwear is recommended. Wear protective hair covering to contain long hair.
11. ALWAYS USE SAFETY GLASSES. Also use face or dust mask if cutting operation is dusty. Everyday eyeglasses only have impact resistant lenses, they are NOT safety glasses.
12. SECURE WORK. Use clamps or a vise to hold work when practical. It's safer than using your hand and it frees both hands to operate tool.
13. DON'T OVERREACH. Keep proper footing and balance at all times.
14. MAINTAIN TOOLS WITH CARE. Keep tools sharp and clean for best and safest performance. Follow instructions for lubricating and changing accessories.
15. DISCONNECT TOOLS before servicing; when changing accessories, such as blades, bits, cutters, and the like.
16. REDUCE THE RISK OF UNINTENTIONAL STARTING. Make sure switch is in off position before plugging in.
17. USE RECOMMENDED ACCESSORIES. Consult the owner's manual for recommended accessories. The use of improper accessories may cause risk of injury to persons.
18. NEVER STAND ON TOOL. Serious injury could occur if the tool is tipped or if the cutting tool is unintentionally contacted.
19. CHECK DAMAGED PARTS. Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function - check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced.
20. DIRECTION OF FEED. Feed work into a blade or cutter against the direction of rotation of the blade or cutter only.
21. NEVER LEAVE TOOL RUNNING UNATTENDED. TURN POWER OFF. Don't leave tool until it comes to a complete stop.

Some dust created by power sanding, sawing, grinding, drilling and other construction activities contain chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- **Lead** from lead based paint.
- **Crystalline silica** from bricks, cement, and other masonry products.
- **Arsenic and chromium** from chemically treated lumber.


Your risk of exposure varies, depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area and work with approved safety equipment, such as face or dust masks that are specifically designed to filter out microscopic particles.

Noise Emission.

Equivalent A-weighted Sound pressure level according to EN ISO 3746: 75.66 dB(A)

Uncertainty, K in decibels: 4.0 dB (A) according to EN ISO 4871

The figure quoted is emission levels and are not necessarily safe working levels. Whilst there is a correlation between the emission and exposure levels, this cannot be used reliably to determine whether or not further precautions are required. Factors that influence the actual level of exposure of the workforce include characteristics of the work room, the other sources of noise, etc. i.e. the number of machines and other adjacent processes. Also the permissible exposure level can vary from country to country, This information, however, will enable the user of the machine to make a better evaluation of the hazard and risk.

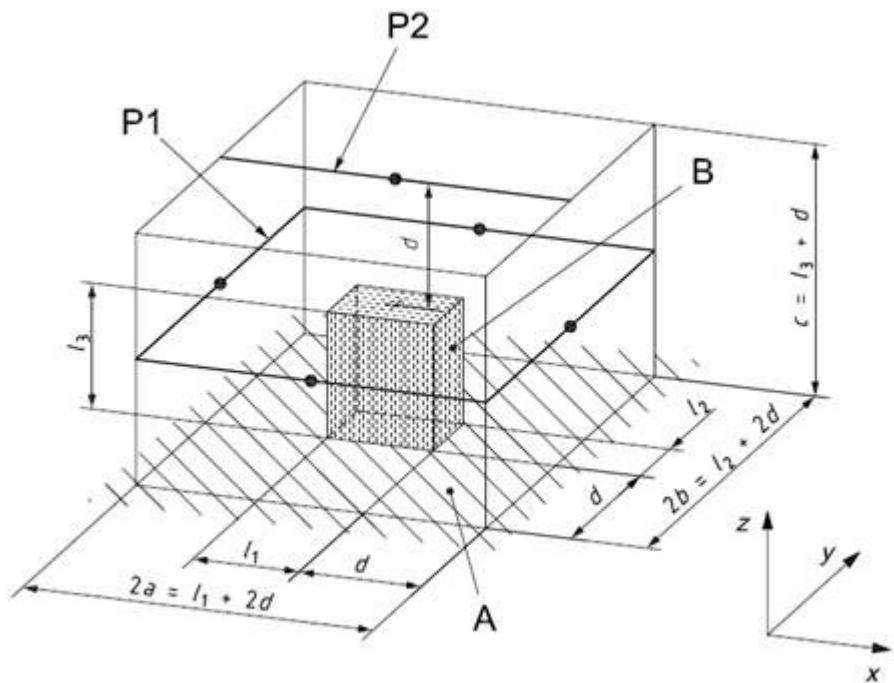


LAGUNA**CE
UK
CA****19-38 DRUM SANDER**

Model 71938-D

Power 1~230V 50Hz 8.9A P2=1.3kw S1

Specification

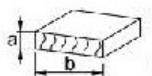

a= 0.8 - 100 mm

b= max 480(960) mm

Series No.

Weight 118 kg

Year

LAGUNA TOOLS 2072 Alton Parkway, Irvine, CA 92606
www.lagunatools.com

SPECIFICATIONS

| | |
|----------------------------------|---|
| Maximum Width | 965 mm (2 passes) |
| Minimum Length | 57 mm |
| Maximum Thickness | 101.6 mm |
| Minimum Thickness | 0.8 mm |
| Dimensions | 915 x 1067 x 610 mm (without stand) |
| Drum diameter | 127 mm diameter - 1450 rpm. |
| Dust port diameter | 100 mm |
| Height Adjustment | 1.4 mm per revolution (depth scale included) |
| Conveyor Motor | Direct drive D.C. motor; Infinitely variable 0 - 3 m/min. |
| Drive Motor (TEFC) | 1-3/4 HP - Continuous-duty |
| Power Requirements | 230 V, 1 Ph |
| Shipping Weight (3 boxes) | 130 kg (weight varies on how equipped) |

ABOUT THE SUPERMAX TOOLS DRUM SANDER

This manual is designed to help familiarize you with your SuperMax Tools drum sander, and to help you take advantage of its exclusive features. By understanding its major components, and how they work together, you will be able to get the most from your investment.

The SuperMax Tools drum sander is basically made up of:

1. Height adjustment handle of the drum.
2. Shroud.
3. Depth scale.
4. Knob to start feed conveyor and selects feed rate.
5. Starts and stops the motors.
6. Conveyor table.
7. Tension roller contact adjustment.
8. Drum carriage.



UNPACKING YOUR SUPERMAX TOOLS DRUM SANDER

Your 19-38 drum sander has been shipped mostly assembled from the factory. If any damage has occurred as a result of shipment, notify the transportation company as soon as possible and ask them to make an immediate inspection. Ask for a damage or loss report. Also notify your distributor of any loss or damage during shipment. See enclosed Warranty Statement.

NOTE: Before setting up make sure that the space is adequate for your new equipment. We also recommend that there is more than one person available for lifting and initial set up procedures.



TO AVOID PROBLEMS AND POTENTIAL DAMAGE TO THE MACHINE, PLEASE READ THROUGH THE UNPACKING INSTRUCTIONS BELOW BEFORE PROCEEDING TO SET UP THE MACHINE IN YOUR SHOP.



Assemble the SuperMax Tools 19-38 drum sander Open Stand #71938-OP or alternatively, if you have chosen to use your own bench prepare the existing bench for the sander attachment.

NOTE: See Open Stand #71938-OP manual included in the Open Stand shipping box for stand set-up and directions.




Open box 1 that contains the main sanding unit. Remove the cardboard liner. Open the plastic bag enclosing the sanding unit.


NOTE: There will be a small container of hardware included with your sander. This container will include everything you need to set up your sander (see above).



Cut each corner of BOX 1 to fold sides flat, providing access to sanding unit.

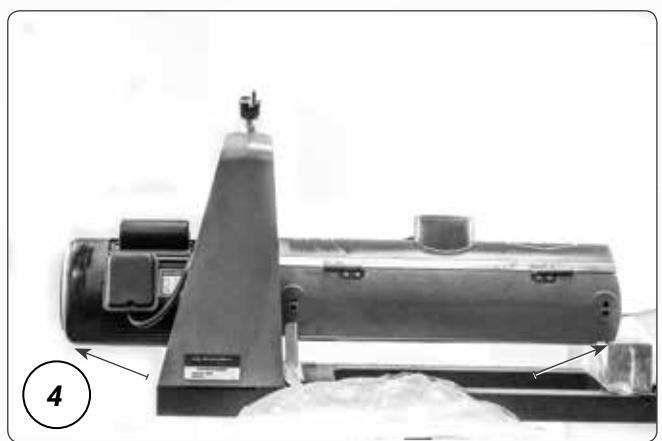

With one or two helpers, place the sanding unit on stand or bench (lift points marked).

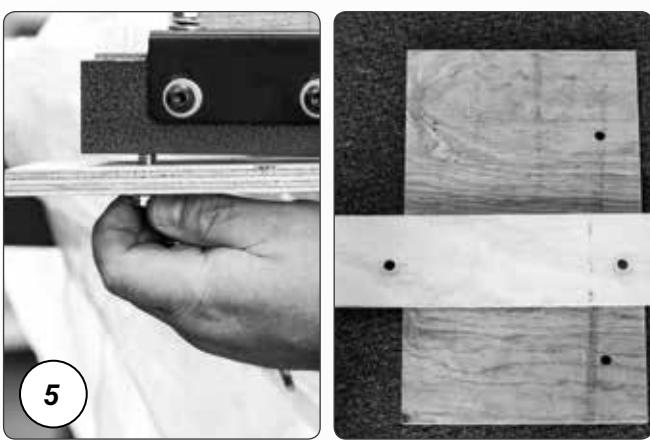

Remove the two wooden packing plates from bottom of the sanding unit using the enclosed wrench and keep wrench for future adjustments.



NOTE: These bolts that you just removed from the packing plates will work as your bolts for attaching the sander or as extra bolts for future replacement.




Install knob to height adjustment handle. First, finger tighten nut to knob. Thread stud from knob into hand wheel and tighten nut against hand wheel.


Turn the handle and raise sanding head to higher position to remove packing block from under carriage arm.




To prepare the unit for the installation of the conveyor belt, first remove the 2 bolts on the outboard (left) side of the conveyor belt.

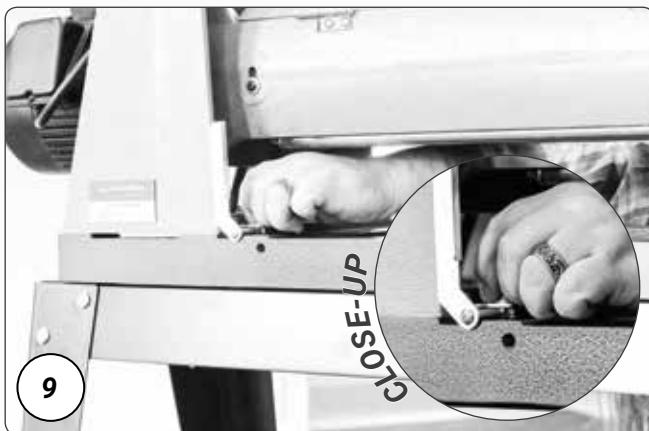

Next remove the 2 bolts on the inboard (right) side of the conveyor belt.

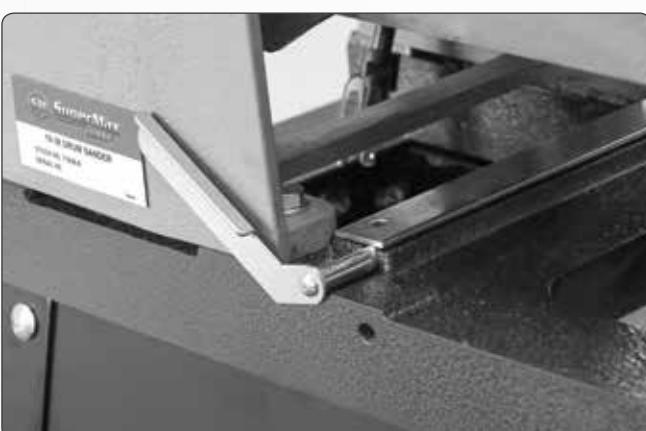


NOTE: Leave the silver plate, which is near the fast lever and under the motor, in place when removing bolts.

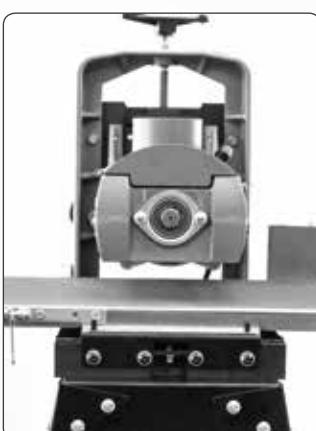

Open box 2 and remove conveyor from packaging and place on sanding unit. The conveyor motor should be nearest to the main motor and depth gauge.



NOTE: The fast lever should be in the upright position for installation of the sanding unit. The fast lever raises the inboard (right) side of conveyor up. Do not ever tighten the bolts all the way down. The fast lever should always be able to be moved back and forth between and up/down position. The bolts should be tightened, but not so tight that the fast lever doesn't move. The lever should be able to move from the down to up position easily.

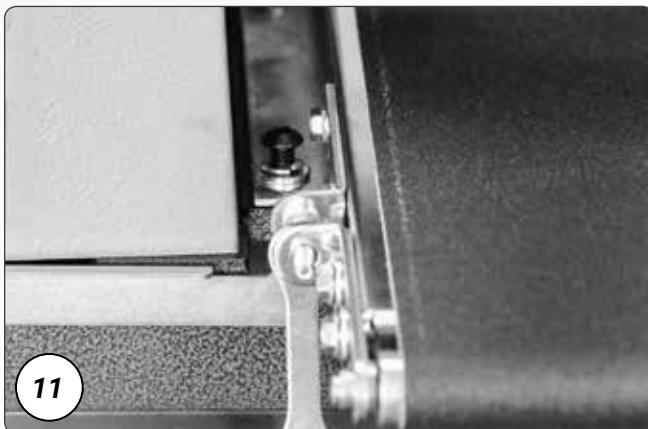

11

Install lock washer and flat washer onto two socket heads (or hex head bolts) and install into flange of conveyor bed on inboard (right) (motor side). Keep support plate in place on inboard (right) side and make sure the fast lever is positioned up.



12

Install two lock washers and two flat washers on the studs on outboard (left) side of the conveyor belt, then tighten all nuts and bolts with wrench.

NOTE: Do not completely tighten bolts with fast lever. See note above.



13

Plug the short power cord that is attached to the motor into the outlet on the control box. This cord will provide switched power for the motor when the machine is plugged into the power source.



14

Check your power supply to make sure that it is adequate (230 V, 1Ph required) but do not plug the machine into the power supply until it is fully set-up.

SETTING UP YOUR DRUM SANDER

Your SuperMax Tools 19-38 sander should now be in place and ready for the final set-up. The sander was adjusted and aligned at the factory. However simple alignment checks will ensure that everything is in perfect order. Problems can be avoided if these essential checks and set-up procedures are performed prior to operation.

CHECKING DRUM ALIGNMENT

Checking the alignment before using the sanding drum is necessary to make sure that the drum is parallel.




Remove the abrasive on the drum. Removing the abrasive is necessary to make sure that the adjustment is as accurate as possible and the texture on the abrasive will make the adjustment imprecise.



Locate the height adjustment handle for raising and lowering the sanding head.

NOTE: The height adjustment handle controls the drum height. Turning the handle raises or lowers the sanding head. One revolution of the handle raises or lowers the head by 1.4 mm.

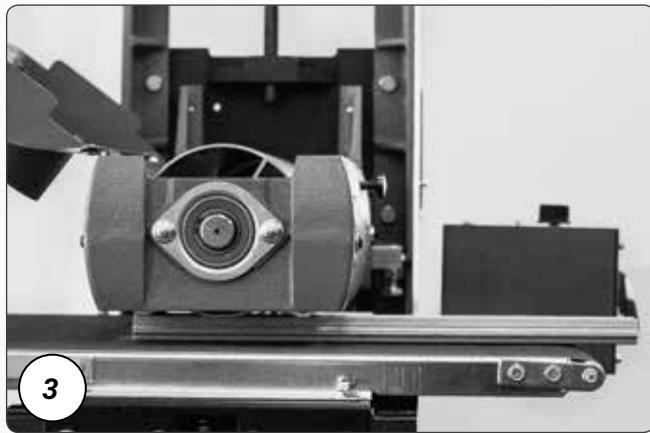

Use a flat, uniform piece of wood as a thickness gauge. Insert it between the conveyor belt and the drum on the inboard (right) side of the machine.

The tension rollers are set just below the drum enough so that items cannot pass easily underneath. Use the height adjustment handle as necessary to ensure that the piece of wood makes contact with the drum.




After you place the piece of wood between the conveyor belt and the drum, rotate the height adjustment handle up one full turn. After the height has been adjusted the wood piece may be removed.

NOTE: You have to repeat these steps on the outboard (left) side of the machine using the same procedure. As you check look to make sure that the drum is parallel. A simple visual check that the drum is parallel is sufficient.

If the drum is not parallel, loosen the 4 socket head screws **A** (these screws are along the outboard (left) side of the conveyor belt) and raise or lower the conveyor with the adjustment nut **B** to achieve parallel alignment. Then tighten the four socket head screws.

To achieve parallel alignment on the inboard (right) side of the machine, repeat steps 3 and 4, then adjust the alignment if needed by loosening the 4 socket head screws located along the outboard (left) side of the conveyor and turning the height adjustment nut of the conveyor.

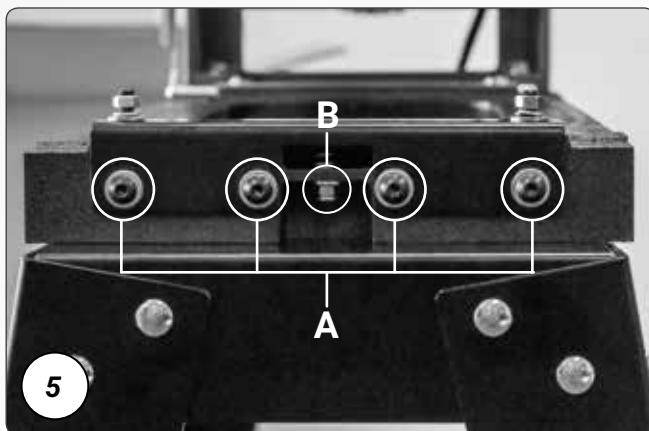

CONNECTING DUST COLLECTORS

Dust collection is necessary for the SuperMax Tools 19-38 drum sander. The sander comes equipped with a 100 mm diameter dust exhaust port at the top of the cover. Check to make sure that the minimum dust requirements are sufficient.

To attach to your collection system, install 100 mm hose from your collector. The minimum recommended dust collector capacities is 600 cfm. For best results, follow the recommendations of the manufacturer of your dust collection equipment.

When connecting dust collectors straight pipe is preferred because it is the least restrictive for airflow. If straight pipe is not possible Y's and elbows are preferred because they are less restrictive to airflow than T's.

NOTE: Some applications will require more dust collection than the recommended minimum.

POWER AND ELECTRICAL SAFETY

The SuperMax Tools 19-38 drum sander requires 230 V, single-phase service. After the dust collection system is in place and the drum alignment is checked your machine should be ready to be powered up and operated.

ABRASIVE SELECTION GUIDE

GRIT COMMON APPLICATION

| | |
|----------|--|
| 24 Grit | Abrasive planing, surfacing rough-sawn boards, maximum stock or glue removal |
| 36 Grit | Abrasive planing, surfacing rough-sawn boards, maximum stock or glue removal |
| 50 Grit | Surfacing and dimensioning boards, trueing warped boards |
| 60 Grit | Surfacing and dimensioning boards, trueing warped boards |
| 80 Grit | Light dimensioning, removal of planer ripples |
| 100 Grit | Light surfacing, removal of planer ripples |
| 120 Grit | Light surfacing, minimal stock removal |
| 150 Grit | Finish sanding, minimal stock removal |
| 180 Grit | Finish sanding only, not for stock removal |
| 220 Grit | Finish sanding only, not for stock removal |

INSTALLING AND WRAPPING ABRASIVES

Accurate attachment of the abrasive strip to the drum is critical to achieving the top performance from your SuperMax Tools 19-38 drum sander.


WRAPPING ABRASIVES

Abrasive strips do not have to be pre-measured. The end of the roll is first tapered and attached to the outboard (left) side of the drum. Then the strip is wrapped around the drum, and the second taper is made for attachment to the inboard (right) side of the drum. To attach a strip to the drum, follow the procedure below.

Drum width: 19"

Tip-to-tip: 114-1/2"

Wrap ready to install: 108-1/2"

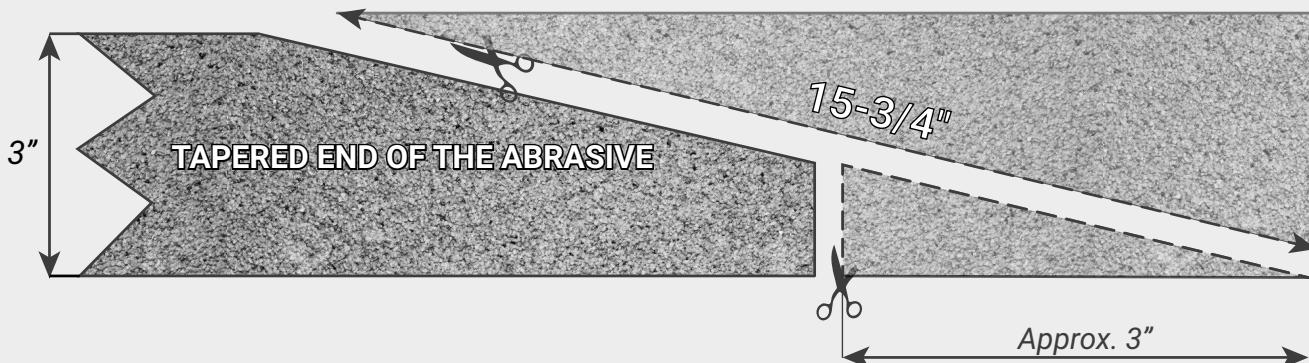

NOTE: Pre-cut wraps have been factory tapered to the specific width of your drum. If you are cutting your own abrasive, use the wrap that came on the drum as a template or the template below (abrasive side up).



Mark and cut a taper at one end of the roll as shown above. Because the tapered end should use most of the left (outboard) slot width, its end must be trimmed. Start on the left (outboard) side of the drum.

Pinch or squeeze the clip lever on the left (outboard) side of the drum. Insert the tapered end through the slot and into the fastener so that it uses most of the width of the slot. Release the clip lever to securely hold the wrap end in the fastener.



Wind the wrap around the drum, being careful not to overlap the windings. The tapered cut of the wrap end should follow the edge of the drum.

Continue to wrap the abrasive in a spiral fashion by rotating the drum with your left hand and guiding the wrap with your right hand. Successive windings of the wrap should be flush with previous windings without any overlap.



3

Pinch or squeeze the clip lever to open the clip, and pull the take-up lever to the top. Insert the tapered end through the slot in the inboard (right) end of the drum.



4

The take-up fastener is designed to automatically take up any slack caused by stretching of the abrasive wrap. The abrasive wrap may stretch enough in use to allow the take-up lever to reach its lowest position so it no longer is able to maintain tension on the wrap.

If this occurs, it will be necessary to reset the take-up lever by raising it, pushing the wrap end into the slot, and then releasing the clip lever.

NOTE: Take notice that for detail only the drum was removed to show the inboard (right) take-up fastener.

PROPER ABRASIVE WRAP POSITION

Position the abrasive wrap in the slot with sufficient room between the inside of the slot and the tapered end of the wrap to allow it to be pulled into the drum as needed (see opposite picture). If enough space is not left between the wrap and the inside of the slot the take-up fastener will not operate properly.

ABRASIVE WRAP TENSION ADJUSTMENT

The abrasive wrap may stretch enough in use to allow the take-up lever to reach its lowest position. If this occurs then tension is not longer maintained on the abrasive wrap. To fix this reset the take-up lever by raising it, pushing the abrasive wrap into the slot and then releasing the clip lever.



MAXIMIZING ABRASIVE LONGEVITY

A sandpaper cleaning stick may be used to remove deposits and help extend the life of the abrasive.

1. To use the cleaning stick, operate the sanding drum with the dust cover open and dust collection on.
2. Hold the cleaning stick against the rotating drum and move it along the drum surface.
3. Use a shop brush to remove any cleaning stick remnants from the drums before resuming sanding operations.



FOR YOUR OWN SAFETY ALWAYS WEAR EYE PROTECTION WHILE PERFORMING ABRASIVE CLEANING AND TAKE ALL PRECAUTIONS TO AVOID ANY CONTACT WITH HANDS OR CLOTHING ON THE UNCOVERED.

OPERATING THE 19-38 DRUM SANDER

Your sander will be able to perform an infinite variety of sanding projects all designed to your specifications. With some time and experimentation the proper setting and technique for each job will become apparent.

DRUM DEPTH OF CUT

Determining the depth of cut is the most important operating procedure decision. It may take some experimentation to determine the proper depth of cut. The crucial variables to keep in mind are abrasive grit, type of wood, project type, and conveyor feed rate. We recommend practicing on a scrap of wood prior to sanding a project.

• Depth Scale Operation

The depth scale (see opposite picture) measures the distance between the conveyor table and the bottom of the sanding drum. The sanding head must be parallel to the conveyor bed surface.

1. To calibrate the depth scale, loosen the two screws holding the scale. Lower the drum (with abrasive installed) until the drum touches the conveyor belt.
2. Slide the scale to align with the pointer at the "0" mark. Tighten the two screws holding the scale.

An optional DRO (digital read out) for depth is available (see opposite picture). This offers the most precise reading of sanded thickness and allows for accurate repeatability of a thickness. Great when making parts that must be an exact thickness or when matching a thickness.


1. To operate, turn ON and select standard inch "in" or metric millimeter "mm".
2. Lower drum, with abrasive installed, until it touches the conveyor belt. Press "zero" button to calibrate.

• Using Thickness Gauge

Another method to set depth of cut is to use the thickness gauge attached to the inboard (right) side of the sander (see opposite picture). The gauge must be adjusted to the same height as the abrasive in use.

1. Place a flat piece of scrap stock under the drum with the abrasive in place. Lower the drum until the abrasive lightly touches the scrap piece of stock.
2. Without changing the height, place the scrap stock under the thickness gauge. Adjust the bottom of the gauge by loosening the large nut and rotating the gauge up or down until it lightly touches the scrap piece of stock.
3. Tighten the large nut. Now the stock can be placed under the thickness gauge and the drum lowered until the gauge lightly touches the stock to be sanded. By using this method the stock does not need to be carried under the drum to set depth of cut.

A good rule of thumb when sanding is to place the stock under the drum and lower the sanding head until the stock is in contact with the drum but the drum can still be rotated by hand. Normally as the depth of cut is adjusted the handle will be rotated no more than a third of a turn at any time. INTELLISAND will help with this process.

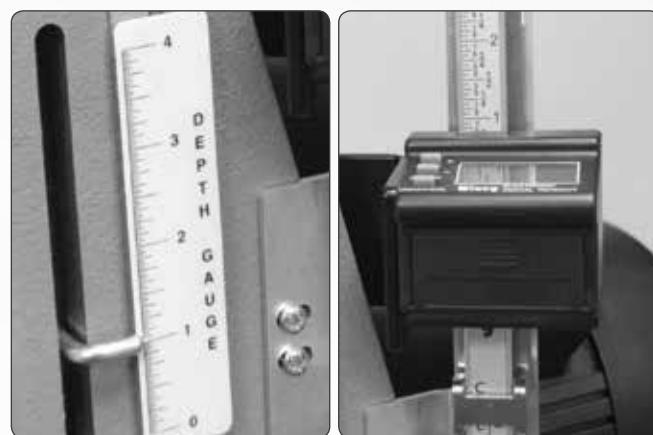

CONVEYOR AND SPEED RATE

After the depth of cut has been determined, selecting the proper feed rate is essential. For finish sanding the best finish is usually achieved with a slow to moderate feed rate. This allows for the most revolutions of the drum per inch of sanding. Faster feed rates can be used as long as the machine is not over-stressed.

When finish sanding with grits finer than 80, the best finish can usually be obtained if INTELLISAND does not engage. If INTELLISAND does slow the conveyor when finish sanding, it is best to make another sanding pass without changing the thickness setting and sand again.

NOTE: INTELLISAND will automatically adjust the conveyor feed rate if an excess load is detected. This prevents excessive gouging, reduces the risk of burning and protects the machine from overload or stalling. The red light by the adjustment knob will come on when INTELLISAND is operating. When the load is decreased, INTELLISAND will automatically increase the feed rate to the pre-selected speed.

STOCK FEEDING OPERATION

To feed stock through the sander rest the stock and hold the stock to be sanded on the conveyor table. Allow the conveyor to carry the stock into the drum. Once the stock is halfway through, reposition yourself to the outfeed side of the machine to receive and control the stock as it exits the unit.

STOCK FEEDING MAXIMUM PERFORMANCE

The built-in versatility of the SuperMax Tools 19-38 drum sander allows it to be used for a wide range of tasks. Learning to use the multiple controls to make adjustments will allow you to fine tune the machine for maximum results no matter what the job. The best results come from experimenting with different machine adjustments to best fit the job at hand.

- **Sanding stock wider than the drum**

When dealing with stock that is wider than the drum the fast lever will be very useful (see opposite picture). Wide stock may require extra space between the drum and conveyor along the outboard (left) edge. The extra space will help prevent and overlap line or ridge from developing along the sanded part where it extends beyond the sanding drum.

Adjusting the fast lever approximately half-way between the full upright and full downright position allows for easy alteration of the drum position in relationship to the conveyor without changing the initial drum alignment. It is a good idea to test a scrap piece of stock prior to sanding. If a line or ridge is still visible after adjusting the fast lever additional adjustments can be made to the drum alignment. After sanding stock wider than the drum the fast lever should be adjusted back to the original position. The fast lever should be put into the up position.



NOTE: The fast lever raises the inboard (right) side of the table .003. Never tighten the bolts all the way down. The fast lever should always be able to be moved back and forth between and up/down position. The bolts should be tightened, but not so tight that the fast lever doesn't move.

- **Sanding multiple pieces simultaneously**

When sanding multiple pieces at once, make sure to stagger or step the pieces across the width of the conveyor belt. This position provides better contact with the tension rollers. It is best to only process multiple pieces that are all of a similar thickness. If there is a thickness difference the thinner pieces may not come in contact with the tension rollers and may slip on the conveyor belt

- **Sanding Imperfect or Tall Stock**

To avoid bodily injury take special care when sanding stock that is twisted, bowed or otherwise varied in thickness from end to end. If possible support such stock as it is being sanded to keep it from slipping or tipping. Use extra roller stand, assistance from another person, or hand pressure on the stock to minimize potentially hazardous situations. When sanding high or tall stock special attention is necessary to prevent tipping or slippage. Extra care may be needed as the stock exits the machine.

- **Stock Feeding Position and Angle**

Positioning the stock at an angle will allow the most effective stock removal and least loading on the abrasives. Feeding stock straight through yields the widest sanding capacity and least noticeable scratch pattern. Some pieces because of their dimensions will need to be fed into the sander at a 90-degree angle, which will be perpendicular to the drum. However, even a slight offset angle of the stock can provide for more effective sanding. Final pass sanding should be done following the grain pattern.

TENSION ROLLER PRESSURE

The tension roller pressure is factory set and should be adequate. However, the pressure of each roller can be adjusted as needed.

To increase the tension turn the tension adjusting screw clockwise 1/4 revolution at a time. To decrease tension turn the adjusting screw counter-clockwise 1/4 revolution at a time (see opposite picture).

NOTE: Too little pressure can result in slippage of stock on conveyor belt or kick-back. Too much tension can cause snipe when drum sanding.



TENSION ROLLER CONTACT ADJUSTMENT

The tension rollers are factory set for the most versatile use.


1. If necessary, to adjust tension roller contact, loosen the four socket head screws holding the tension roller brackets (two per side; front and back – shown in opposite picture).
2. Have abrasive wrapped on drum.
3. With machine unplugged, lower sanding drum until it rests on conveyor belt.
4. Raise drum 2 to 3 revolutions.
5. Tighten the four socket head screws (two per side; front and back).
6. Raise drum up, off of the conveyor belt.
7. Set drum for proper sanding height and process stock.



CONVEYOR BELT TENSION

Insufficient belt tension will cause slippage of conveyor belt on the drive roller during sanding operation. The conveyor belt is too loose if it can be stopped by hand pressure applied directly to the top of the conveyor belt. Excessive belt tension can result in bent rollers, premature wearing of the bronze bushings or conveyor belt.

To adjust the tension of the conveyor belt, first adjust the take-up screw nut on both sides of the conveyor to obtain approximately equal tension on both sides of the belt when taut (see opposite picture).

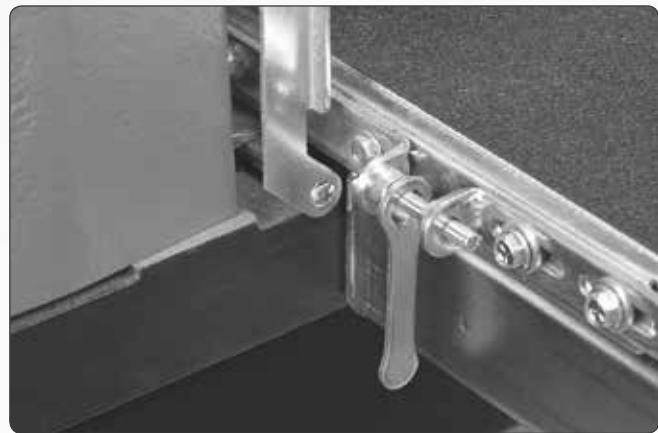

CONVEYOR BELT TRACKING

Belt tracking adjustments are made while the conveyor belt is running. After the proper belt tension is obtained turn the conveyor unit on and set it at the fastest speed setting. Watch for a tendency of the conveyor belt to drift to one side of the conveyor. To adjust the belt tracking, tighten the take-up screw nut on the side the belt is drifting toward, and loosen the take-up screw nut on the opposite side. Adjusting the take-up screw nuts on either side of the conveyor allows belt-tracking adjustments to be made without affecting belt tension. Note: Adjust the take-up screw nuts only 1/4 turn at a time. Then allow time for the belt to react to the adjustments before proceeding further. Avoid over-adjustments.

MAINTENANCE

MONTHLY MAINTENANCE CHECKLIST

- Lubricate conveyor bushings and check for wear.
- Lubricate with a dry lubricant spray all of the moving parts, such as threaded rods and washers.
- Clean dust from conveyor belt.
- Check all set screws for tightness.
- Clean drum and abrasives if necessary.

REPLACING CONVEYOR BELTS

To replace the conveyor belt, the conveyor assembly must be removed from the machine.

1. Raise the drum carriage to its highest position using the height adjustment handle.
2. Turn off power source to machine. Unplug main drive motor from receptacle (in gear motor assembly).
3. Loosen the conveyor take-up screws to relieve belt tension and slide the drive roller fully inward.
4. Remove the two Allen head bolts on the inboard (right) side that attach the conveyor assembly to the base.
5. Remove the two nuts and washers from outboard (left) side (see opposite picture).
6. Lift the conveyor and remove it from the sander. Set conveyor on motor side. Avoid tearing the belt on any edges underneath the conveyor bed during removal. Reverse the procedure for re-installation. Re-install the conveyor bed to sander.



CLEANING THE MACHINE

The sander may need to be cleaned more frequently depending upon frequency of use. The drum and the conveyor belt need to be clean. Allowing excess build-up of dust and debris can adversely affect performance and increase the likelihood of slippage on the conveyor belt. Sweep the conveyor belt clean after all operations. When cleaning dust from the drum leave the dust collection system on.

SUPPLY CHECKLIST

ACCESSORIES

| | |
|-----------|---|
| 71938-CL | Closed stand, includes locking wheels |
| 71938-OP | Open stand |
| 98-0130 | Caster Set, heavy duty, roll & swivel lock (used with open stand) |
| 71938-7 | Infeed/outfeed tables |
| 71938-DRO | DRO (digital read out) depth scale |

CONVEYOR BELTS

| | |
|------------------|--|
| 60-0322 (Type 1) | 100 grit abrasive surface with reinforced backing (standard equipment) |
| 61-1003 (Type 2) | Polyurethane textured surface with monofilament backing |

DRUM ABRASIVES

| | | |
|-----------|-------------------------------|---------------------------------------|
| 60-19-036 | 36 Grit | SuperMax Tools 19-38 - 3-Wraps in Box |
| 60-19-060 | 60 Grit | SuperMax Tools 19-38 - 3-Wraps in Box |
| 60-19-080 | 80 Grit | SuperMax Tools 19-38 - 3-Wraps in Box |
| 60-19-100 | 100 Grit | SuperMax Tools 19-38 - 3-Wraps in Box |
| 60-19-120 | 120 Grit | SuperMax Tools 19-38 - 3-Wraps in Box |
| 60-19-150 | 150 Grit | SuperMax Tools 19-38 - 3-Wraps in Box |
| 60-19-180 | 180 Grit | SuperMax Tools 19-38 - 3-Wraps in Box |
| 60-19-220 | 220 Grit | SuperMax Tools 19-38 - 3-Wraps in Box |
| 60-19-000 | Assorted box (36/80/120 grit) | SuperMax Tools 19-38 - 1 each in Box |

NOTES

TROUBLESHOOTING YOUR SUPERMAX TOOLS DRUM SANDER

Any operating problems with the drum sander will likely occur most often during the period that you are becoming familiar with its components and their adjustments. If you are experiencing a problem affecting the machine's performance, check the following listings for potential causes and solutions; it may also pay to review the previous sections in this manual on setting up and operating your machine.

TROUBLESHOOTING GUIDE: MOTORS

| PROBLEM | POSSIBLE CAUSE | SOLUTION |
|--|--|---|
| MOTOR DOES NOT START | Main power cord unplugged from receptacle | Plug in primary power cord |
| | Drum motor cord unplugged from receptacle near power-feed motor. | Plug in drum motor cord at receptacle on machine if so equipped (Fig 5) |
| | Circuit fuse blown or circuit breaker tripped | Replace fuse or reset breaker (after determining cause) |
| BRUSH MOTOR OVERLOADS | Inadequate circuit | Check electrical requirements |
| | Machine overloaded | Use slower feed rate; reduce depth of cut |
| CONVEYOR MOTOR OSCILLATES | Motor not properly aligned | Loosen housing bolts, run motor, retighten bolts. |
| | Shaft collar or bushing worn | Replace shaft collar or bushing |
| | Drive roller bent | Replace drive roller |
| DRUM MOTOR OR CONVEYOR GEAR MOTOR STALLS | Excessive depth of cut | Reduce depth of cut; reduce feed rate |

TROUBLESHOOTING GUIDE: CONVEYOR


| PROBLEM | POSSIBLE CAUSE | SOLUTION |
|---|--------------------------------|---|
| CONVEYOR DRIVE ROLLERS RUN INTERMITTENTLY | Shaft coupling loose | Align shaft flats of gear motor and drive roller; tighten shaft coupling set screws |
| CONVEYOR BELT SLIPS ON DRIVE ROLLER | Improper conveyor belt tension | Adjust belt tension |
| | Excessive depth of cut | Reduce depth of cut reduce feed rate |

| PROBLEM | POSSIBLE CAUSE | SOLUTION |
|---|---|--------------------------------|
| STOCK SLIPS ON CONVEYOR BELT CAUSING GOUGING | Excessive depth of cut | Reduce depth of cut |
| | Tension rollers too high | Lower tension rollers |
| | Excessive feed rate | Reduce feed rate |
| | Dirty or worn conveyor belt | Clean or replace conveyor belt |
| CONVEYOR MOTOR STALLS | Belt out of adjustment | Readjust belt |
| | Roller bushings elongated due to excessive wear | Replace bushings |

TROUBLESHOOTING GUIDE: MACHINE

| PROBLEM | POSSIBLE CAUSE | SOLUTION |
|---|---|--|
| DRUM HEIGHT ADJUSTMENT WORKS IMPROPERLY | Improper adjustment of height control | Readjust height control |
| KNOCKING SOUND WHILE RUNNING | Bearing worn | Replace bearing Contact distributor |
| SNIPIING OF WOOD (GOUGING NEAR END OF BOARD) | Inadequate support of stock | Use roller stands to support stock |
| | Conveyor drive or driven rollers higher than conveyor bed | Readjust rollers |
| | Excessive tension roller pressure | Adjust rollers |
| BURNING OF WOOD OR MELTING OF FINISH | Feed rate too slow | Increase feed rate |
| | Excessive depth of cut | Reduce depth of cut |
| CONVEYOR MOTOR STALLS | Conveyor belt is too loose | Adjust belt tension |
| | Excessive depth of cut | Reduce depth of cut |
| | Wood slipping on conveyor due to lack of contact | Use alternate feeding procedure |

19-38 - WIRING DIAGRAM

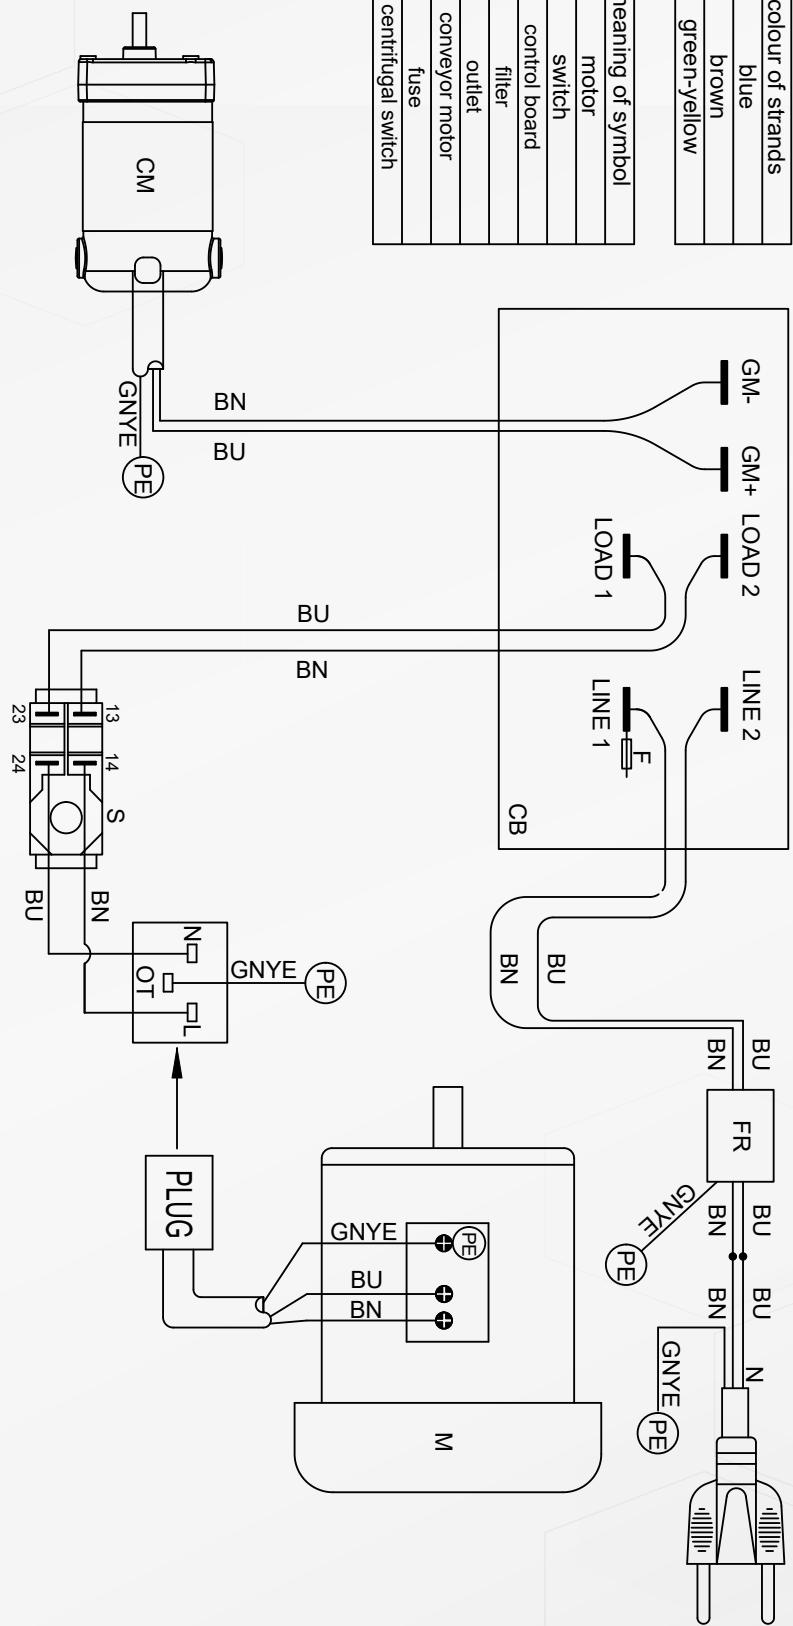


19-38 - PARTS LIST - HEAD ASSEMBLY

| # | PART NO. | DESCRIPTION | SIZE | QTY |
|----|--------------|---------------------------------|-----------------|-----|
| 1 | 480DS-101E | MOTOR | | 1 |
| 2 | 480BS-194-UK | STRAIN RELIEF, MOTOR | PG-11 | 1 |
| 3 | 480DS-103E | MAIN CORD, MOTOR TO CONTROL BOX | | 1 |
| 4 | 480BS-104 | KEY | 3/16"SQX3/4" | 2 |
| 5 | 480BS-105 | NYLON INSERT LOCK NUT | 5/16"-24 | 4 |
| 6 | 480BS-106 | FLAT WASHER | 5/16" | 10 |
| 7 | 480BS-107 | OILITE WASHER | | 8 |
| 8 | 480BS-108 | MOTOR PLATE | | 1 |
| 9 | 480BS-109 | SET SCREW | #8-32X1/4" | 1 |
| 10 | 480BS-110 | HEX CAP SCREW | 5/16"-18X1-1/4" | 6 |
| 11 | 480BS-111 | LOCK WASHER | 3/8" | 4 |
| 12 | 480BS-112 | SOCKET HEAD CAP SCREW | 3/8"-16X1-1/2" | 4 |
| 13 | 480BS-113 | SET SCREW | 1/4"-20X1/4" | 5 |
| 14 | 480BS-114 | COUPLING | | 2 |
| 15 | 480BS-115 | COUPLING SPIDER | | 1 |
| 16 | 480BS-116 | HEIGHT PLATE | | 1 |
| 17 | 480BS-117 | SCREW, PHIL PAN HEAD | M4X0.7X6 | 9 |
| 18 | 480BS-118A | LABEL, DEPTH GAUGE (MM) | | 1 |
| 19 | 480BS-119 | DEPTH GAUGE POINTER | | 1 |
| 20 | 480BS-120 | KNOB | | 1 |
| 21 | 480BS-121 | HEIGHT ADJUSTMENT HANDLE | | 1 |
| 22 | 480BS-122 | NYLON INSERT LOCK NUT | 5/8"-11 | 1 |
| 23 | 480BS-123 | HEIGHT ADJUSTMENT SCREW | | 1 |
| 24 | 480BS-199 | ROTATING DIRECTION LABEL | | 1 |
| 25 | 480BS-125 | THRUST BEARING | 51103 | 1 |
| 26 | 480BS-126 | SHROUD | | 1 |
| 27 | 480BS-127 | STUD | | 4 |
| 28 | 480BS-128 | HEX CAP SCREW | 3/8"-16X1-1/4" | 4 |
| 29 | 480BS-129 | FLAT WASHER | 3/8" | 8 |
| 30 | 480BS-130 | HINGE | | 2 |
| 31 | 480DS-131-CE | DUST COVER | | 1 |
| 32 | 480BS-132 | HANDLE | | 1 |
| 33 | 480BS-133 | PAN HEAD MACHINE SCREW | #8X1/2" | 2 |
| 34 | 480DS-134 | LOCK WASHER | M3 | 2 |
| 35 | 480BS-135 | DUST COVER LATCH | | 1 |
| 36 | 480DS-136 | PHILLIPS FLAT HEAD SCREW | M3X0.5X10 | 2 |
| 37 | 480DS-137 | SANDING DRUM | | 1 |
| 38 | 480DS-138 | NYLON INSERT LOCK NUT | M3X0.5 | 2 |
| 39 | 480DS-139 | INBOARD ABRASIVE FASTENER | | 1 |
| 40 | 480DS-140 | OUTBOARD ABRASIVE FASTENER | | 1 |
| 41 | 480DS-141 | CARRIAGE BOLT | 5/16"-18X" | 4 |
| 42 | 480DS-142 | BEARING | 6205LLU | 2 |
| 43 | 480DS-143 | C-RING | S25 | 2 |
| 44 | 480DS-144 | DRUM CARRIAGE | | 1 |
| 45 | 480BS-145 | FLAT WASHER | 1/4" | 5 |
| 46 | 480BS-146 | ROUND SOCKET HEAD CAP SCREW | 1/4"-20X1" | 4 |

19-38 - PARTS LIST - HEAD ASSEMBLY

| # | PART NO. | DESCRIPTION | SIZE | QTY |
|----|------------|-------------------------------------|---------------|-----|
| 47 | 480BS-147 | FLAT WASHER | 5/16" | 4 |
| 48 | 480DS-148 | BEARING SEAT | | 2 |
| 49 | 480BS-149 | HEX CAP SCREW W/ WASHER | #10-24X3/8" | 1 |
| 50 | 480BS-150 | DUST COVER CATCH | | 1 |
| 51 | 480BS-151 | STUD | | 1 |
| 52 | 480BS-152 | SPRING | | 1 |
| 53 | 480BS-153 | TENSION ROLLER | | 2 |
| 54 | 480BS-154 | BUSHING, OILITE | | 4 |
| 55 | 480BS-155 | TENSION ROLLER BRACKET, INNER LEFT | | 1 |
| 56 | 480BS-156 | SCREW | #8-32X1" | 4 |
| 57 | 480BS-157 | SPRING, TENSION ROLLER | | 4 |
| 58 | 480BS-158 | TENSION ROLLER BRACKET, INNER RIGHT | | 1 |
| 59 | 480BS-159 | PAD, BRACKET-TENSION ROLLER | | 2 |
| 60 | 480BS-160 | BRACKET | | 2 |
| 61 | 480BS-161 | PLATE | | 1 |
| 62 | 480BS-162 | BASE | | 1 |
| 63 | 480BS-163 | ADJUSTING PLATE | | 1 |
| 64 | 480BS-164 | ADJUSTING ROD | | 1 |
| 65 | 480BS-165 | HEIGHT ADJUSTING PLATE | | 1 |
| 66 | 480BS-166 | ROUND SOCKET HEAD CAP SCREW | 5/16"-18X1/2" | 4 |
| 67 | 480BS-167 | LOCK WASHER | 5/16" | 5 |
| 68 | 480BS-168 | SPRING | | 3 |
| 69 | 480BS-169 | NYLON INSERT LOCK NUT | 1/4"-20 | 1 |
| 70 | 480DS-170 | SOCKET HEAD CAP SCREW | M8X1.25X40 | 1 |
| 71 | 480DS-171 | HEX NUT W/ WASHER | 5/16"-18 | 4 |
| 72 | 480DS-172 | BLOCK, MEASURING DEVICE | | 1 |
| 73 | 480DS-173 | HEX NUT | M12X1.75 | 1 |
| 74 | 480DS-174 | STOP BOLT | | 1 |
| 75 | 480BS-198 | WARNING LABEL, POWER | | 1 |
| 76 | 480BS-195 | WARNING LABEL, FINGER | | 2 |
| 77 | 480BS-177 | HEX CAP SCREW | 3/8"-16X3/4" | 4 |
| 78 | 480BS-1106 | SAFTY LUCK | | 1 |
| 79 | 480BS-179 | TENSION ROLLER BRACKET, OUTER RIGHT | | 1 |
| 80 | 480BS-180 | TENSION ROLLER BRACKET, OUTER LEFT | | 1 |
| 81 | 480BS-181 | E-RING | E5 | 1 |
| 83 | 71632-124 | WASHER, WAVE | D17 | 1 |
| 84 | 480DS-184 | LABEL | | 1 |
| 85 | 480BS-196 | HEIGHT DIRECTION LABEL | | 1 |
| 86 | 480BS-186 | MAINTENANCE LABEL | | 1 |
| 87 | 480BS-187 | WARNING LABEL | | 1 |
| 88 | 480BS-1105 | LOCK WASHER | #10 | 1 |
| 89 | 480BS-1104 | HEX NUT | #10-24 | 1 |
| 90 | 480BS-1103 | HEX CAP SCREW W/ WASHER | #10-24X1" | 1 |
| 92 | 480BS-1102 | ABRASIVE STRIP | #80 | 1 |
| 93 | 72550-197 | SCREW, PHIL PAN HEAD | M4X0.7X12 | 2 |
| 96 | 635DS-280 | FASTENER TOOL | | 1 |


19-38 - HEAD ASSEMBLY

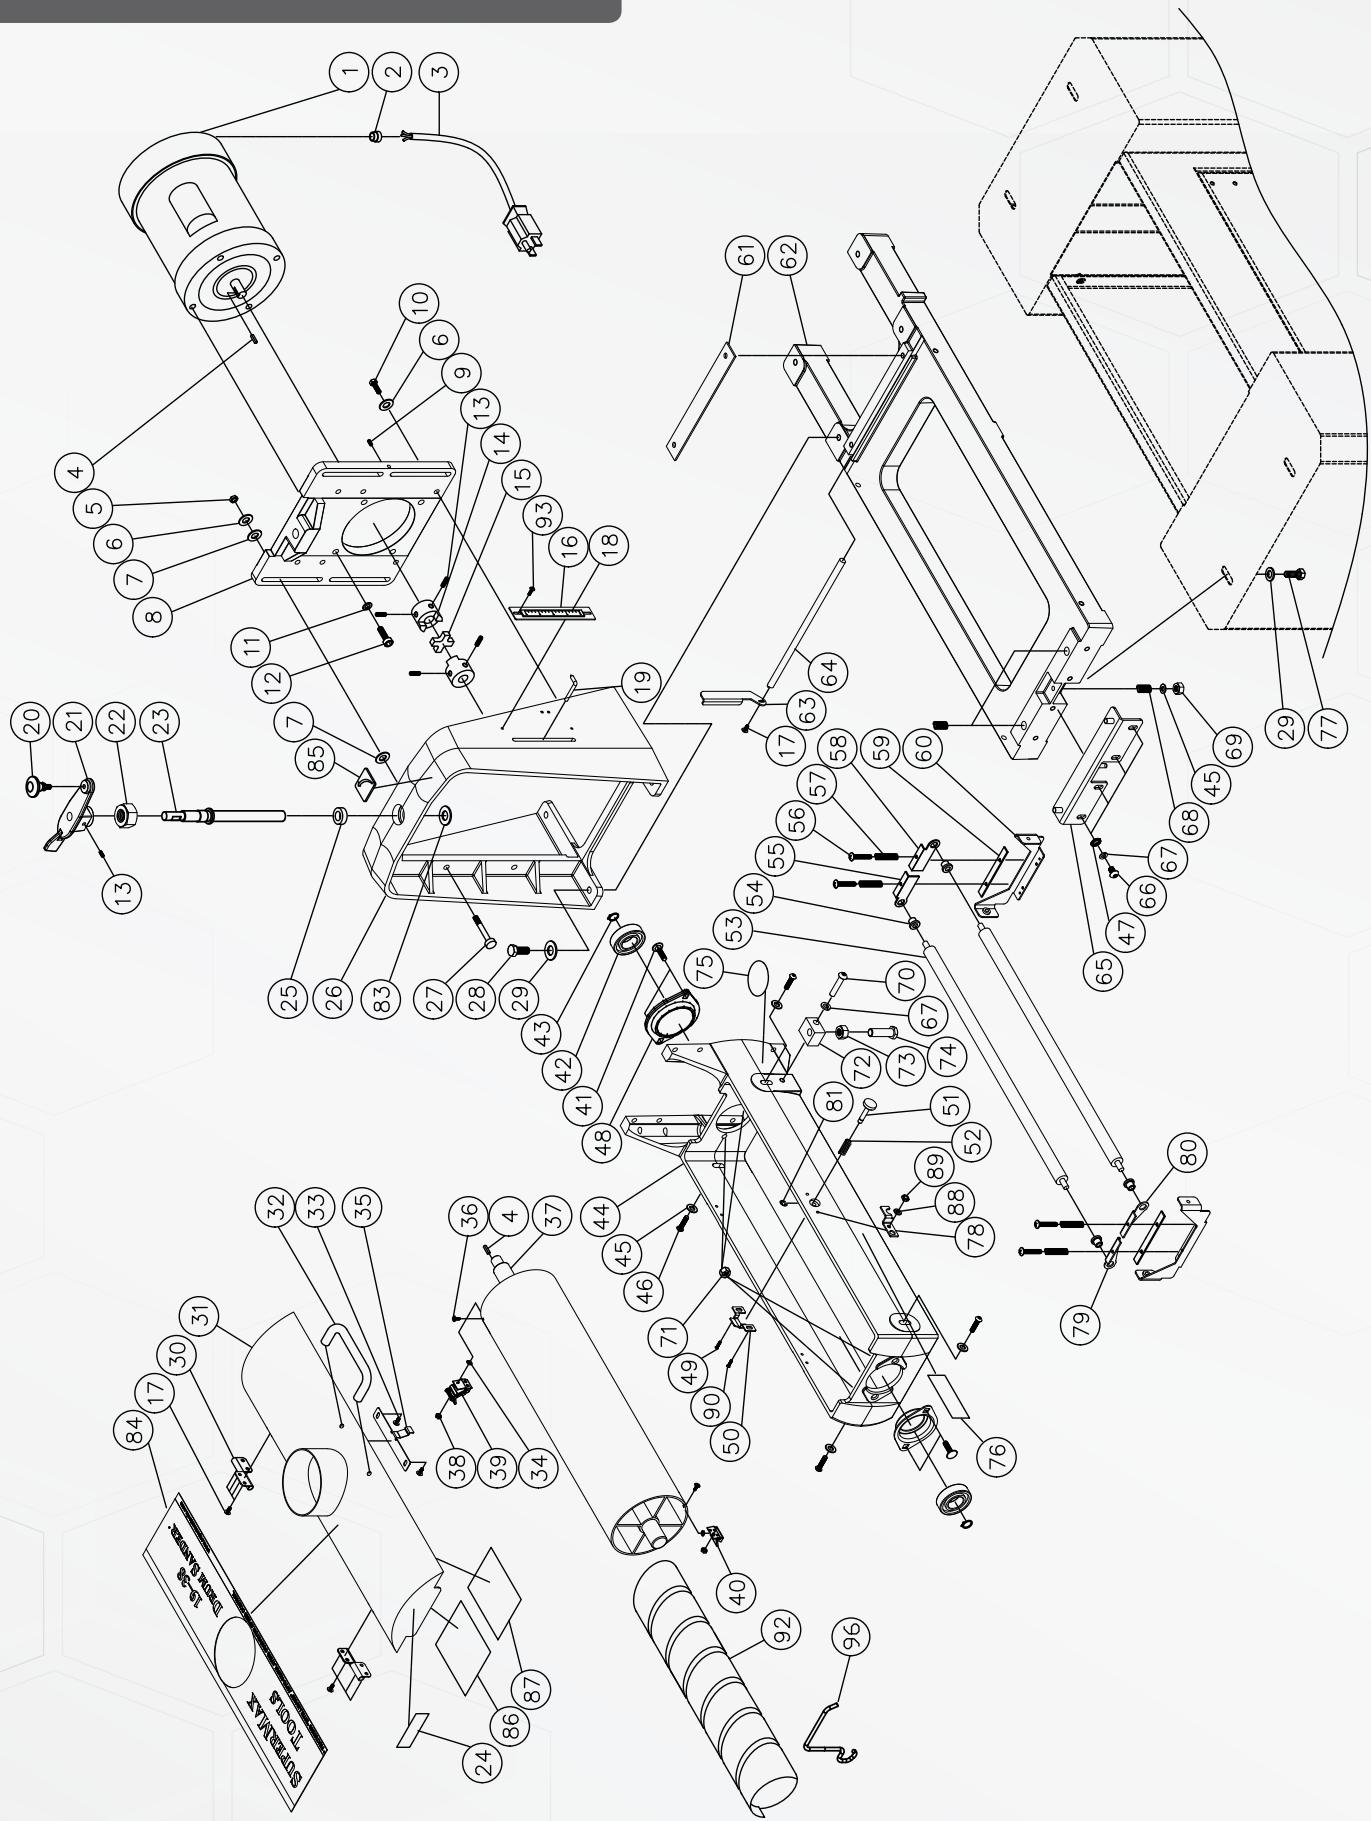

19-38 - PARTS LIST - CONVEYOR AND MOTOR

| # | PART NO | DESCRIPTION | SIZE | QTY |
|----|--------------|-------------------------------------|----------------|-----|
| 1 | 480BS-201A | GEAR MOTOR | 180 VDC | 1 |
| 2 | 480BS-194-UK | STRAIN RELIEF | PG-11 | 1 |
| 3 | 72-5336-JG | POWER CORD | | 1 |
| 4 | 480BS-204 | FLAT WASHER | 5/16" | 4 |
| 5 | 480BS-205 | SOCKET HEAD CAP SCREW | #10-32X1/2" | 4 |
| 6 | 480DS-206-CE | EMC FILTER | | 1 |
| 7 | 480BS-207 | KNOB | | 1 |
| 8 | 480BS-208 | SPEED ADJUSTMENT LABEL | | 1 |
| 9 | 480BS-209 | WIRING GUARD | | 1 |
| 10 | 480DS-210A | CONTROLLER | | 1 |
| 11 | 480DS-211A | CONTROL HOUSING BRACKET | | 1 |
| 12 | 480BS-212 | PAN HEAD SELF-TAPPING SCREW | 5/32"X1/2" | 2 |
| 13 | 480BS-213 | RECEPTACLE, MAIN CORD | | 1 |
| 14 | 480BS-214 | SCREW | #10-32X1/2" | 4 |
| 15 | 480BS-215 | WASHER, LOCK-INT. TOOTH | #10 | 4 |
| 16 | 480BS-216 | HEX NUT | #10-32 | 4 |
| 17 | 480BS-217 | SCREW, HEX HEAD-SLOTTED | #10-32X3/8" | 5 |
| 18 | 480BS-218 | SCREW, PHIL PAN HEAD | #6-32X1/2" | 2 |
| 19 | 635DS-356 | SWITCH, ON/OFF | | 1 |
| 20 | 480BS-220 | COUPLER, SHAFT | | 1 |
| 21 | 480BS-113 | SET SCREW | 1/4"-20X1/4" | 4 |
| 22 | 480BS-222 | BRACKET, BASE- CONTROLLER | | 1 |
| 23 | 480BS-223 | COVER, BASE-CONTROL HOUSING | | 1 |
| 24 | 480BS-224 | HEX CAP SCREW | 1/4"-20X3/4" | 4 |
| 25 | 480BS-225 | WASHER, WAVE | 1/4" | 4 |
| 26 | 480BS-145 | FLAT WASHER | 1/4" | 4 |
| 27 | 480BS-227 | BRACKET, TAKE UP-SLIDE | | 2 |
| 28 | 480BS-154 | BUSHING, OILITE | | 4 |
| 29 | 480BS-229 | ROLLER, DRIVEN | | 1 |
| 30 | 480BS-230 | WRENCH | | 2 |
| 31 | 480BS-231 | HEX NUT | 1/4"-20 | 2 |
| 32 | 480BS-232 | WASHER, LOCK-INT. TOOTH | 1/4" | 2 |
| 33 | 480BS-233 | SCREW, ROUND HEAD- SLOTTED | 1/4"-20X1-3/4" | 2 |
| 34 | 480BS-234 | BRACKET, TAKE UP-BASE | | 2 |
| 35 | 480BS-167 | LOCK WASHER | 5/16" | 4 |
| 36 | 480BS-236 | ROLLER, DRIVE | | 1 |
| 37 | 480BS-237 | BRACKET, SUPPORT-DRIVE ROLLER | | 1 |
| 38 | 480BS-238 | BED, CONVEYOR | | 1 |
| 39 | 480BS-239 | ROUND SOCKET HEAD CAP SCREW | 5/16"-18X3/4" | 2 |
| 40 | 480DS-240 | BELT CONVEYOR, ABRASIVE (NOT SHOWN) | | 1 |
| 41 | 480BS-204 | FLAT WASHER | 5/16" | 1 |
| 42 | 480BS-242 | HEX NUT | 5/16"-24 | 1 |
| 43 | 480BS-243 | SLOTTED SET SCREW | #8-36X5/16" | 1 |
| 44 | PG-9 | STRAIN RELIEF, GEAR MOTOR | PG-9 | 1 |
| 45 | 480BS-245 | HEX NUT | 5/16"-18 | 2 |
| 47 | 480BS-247 | HEX CAP SCREW | 1/4"-X1/2" | 8 |

19-38 - CONVEYOR AND MOTOR

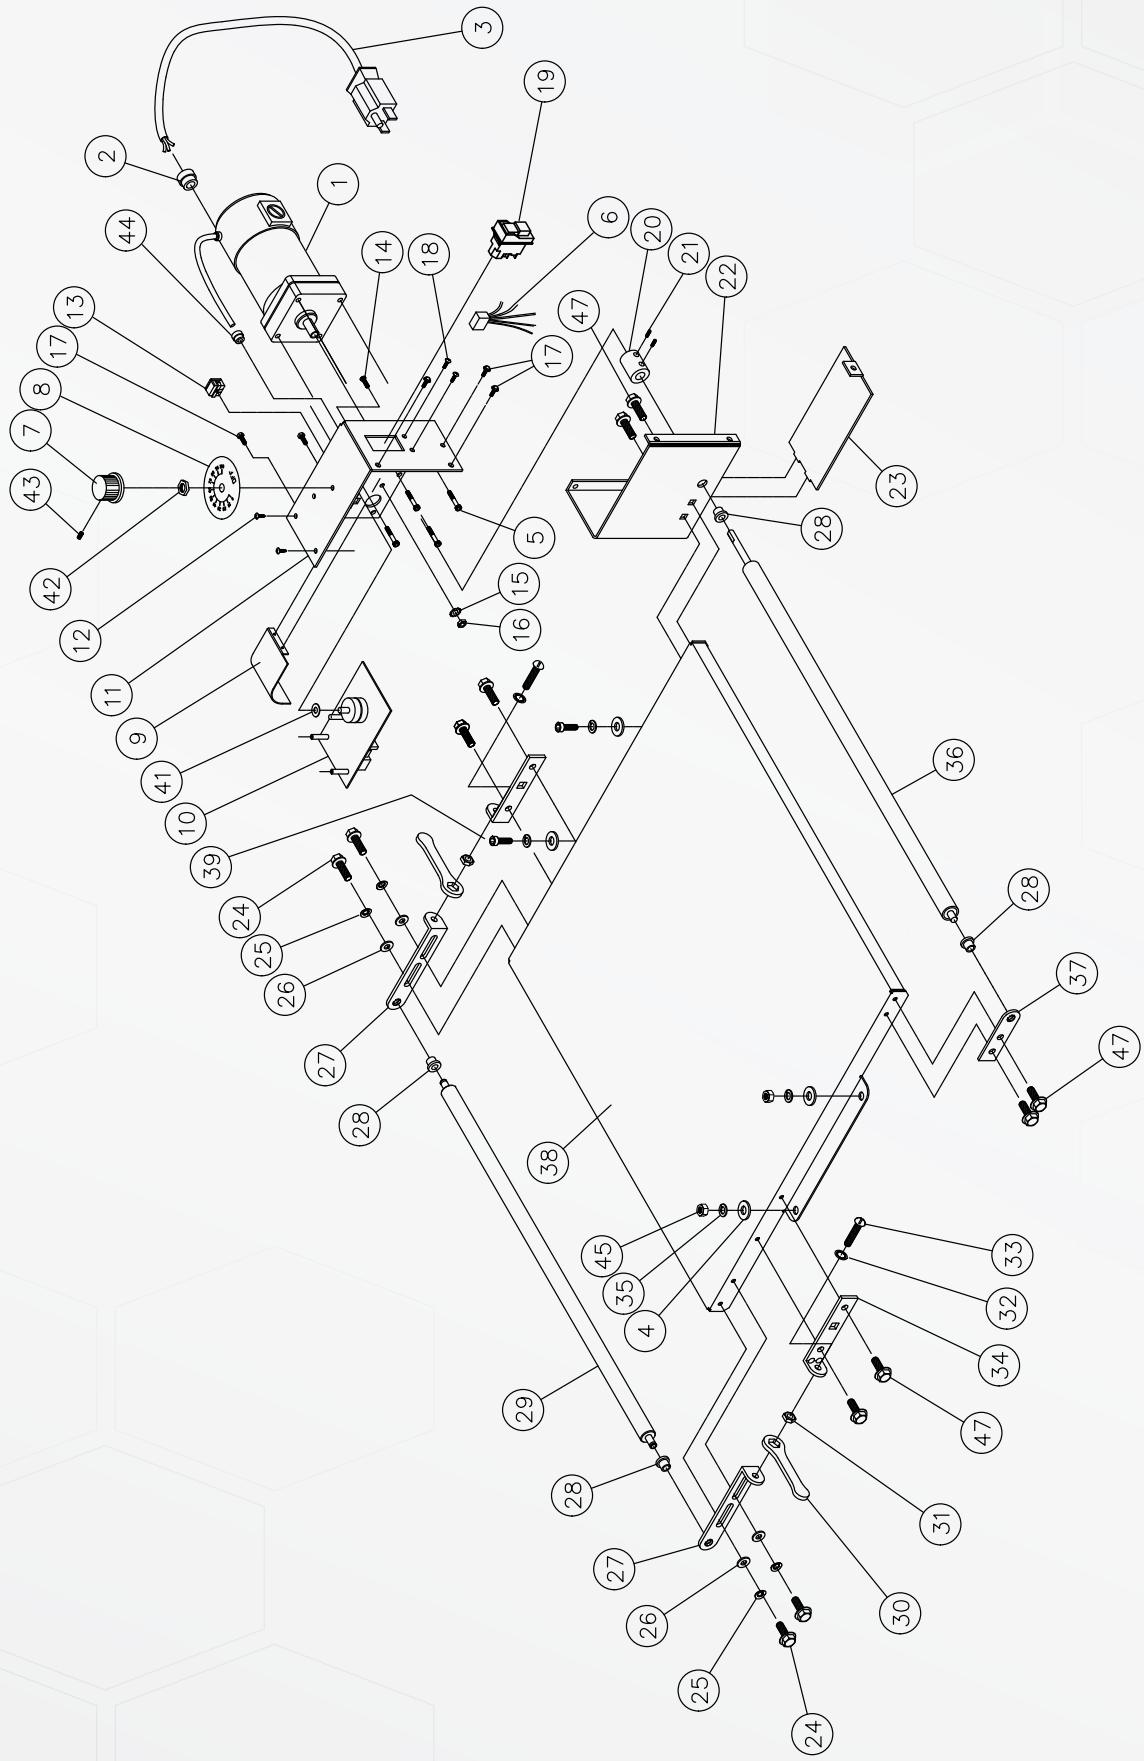



SuperMax
Tools

SuperMaxTools.com - sales@SuperMaxTools.com

P. 1-888.454.3401 - F. 1-651.454.3465

