

carbatec

Installing BS-345C-BTA BLADE TENSIONER ASSEMBLY

Suits: Bandsaw BS-345C (incl CTJ-3501)

Tools required: 2x 6mm short Allen keys

Please note: This procedure should be read in conjunction with the corresponding product User Manual.

1. **WARNING!** Turn off and unplug bandsaw from wall socket or power source
2. Release blade tension quick release (Fig.1), Remove table insert, remove table pin and remove bandsaw blade from saw (Fig.2)
3. Remove manual blade tension knob by lifting up (Fig.3)
4. Using 2x 6mm Allen keys, loosen upper and lower retainers (Fig.4 - behind top wheel). Remove screw from one side only, and remove assemblies,. (Figs.5 & 6)
5. Tilt wheel towards user and remove. This will contain wheel and wheel mounting bracket (Note for re-installation - bracket pivoting hole is towards top) (Fig.7)
6. Remove the blade tension assembly (Fig.8).
7. Reverse these steps for reinstallation.

Please note: Inserting upper and lower retainers may require some patience. A short Philips head screwdriver may help align the components and allow the retainers to be re-inserted..



Fig.1



Fig.2



Fig.3

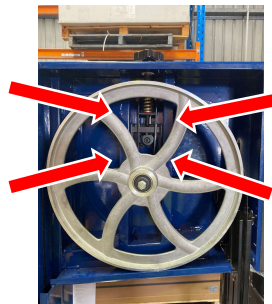


Fig.4



Fig.5



Fig.6

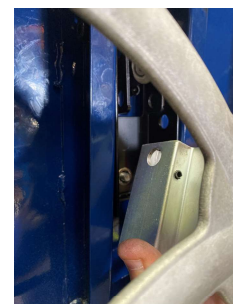


Fig.7

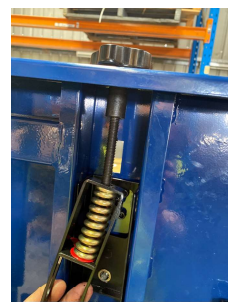


Fig.8